

UNITED MOULDERS LTD

UML - ProSensor Elite Auto Re-Arming Instructions

Iss1



or

UML

Do not detach the inflator from the lifejacket.

- Before commencing the re-arming procedure ensure you have the correct re-arming kit with the correct size of CO² cylinder and that the lifejacket is dry.
 - Keep away from fluids.
 - Ensure the automatic cartridge in the re-arming kit is within its Replace By Date

The instructions below are for both types of inflator as shown above.

Step 1

Unscrew the automatic cartridge by turning it anti-clockwise and discard it in an environmentally friendly manner. Replace it with a new cartridge by turning it clockwise. Tighten up, hand tight.



Step 2

Remove the pierced CO² cylinder by turning it anti-clockwise and discard it in an environmentally friendly manner.



Step 3

If the unit has been manually activated, push the lever back into its slot until it clicks into position.



Step 4

Ensure the black CO² cylinder seal is fitted correctly.



Step 5

Ensure the CO² cylinder cap has not been pierced and then screw it clockwise into the ProSensor Elite Auto inflator. Tighten up, hand tight.



Step 6

If the inflator has been assembled correctly, the two indicator panels will be green.



- Re-pack the lifejacket according to the lifejacket manufacturers instructions.
- When not in use, store the lifejacket in a cool, dry place out of direct sunlight.